# DEPT. OF ELECTRICAL & ELECTRONICS ENGINEERING SRM INSTITUTE OF SCIENCE AND TECHNOLOGY, Kattankulathur – 603203.

Title of Experiment	: 7. Characteristics of semiconductor devices (a) PN junction diode, (b) Zener diode, (c)BJT
Name of the candidate	:
Register Number	:
Date of Experiment	:
	: :

Sl.	Marks Split up	Maximum marks	Marks obtained
No.		(50)	
1	Pre Lab questions	5	
2	Preparation of observation	15	
3	Execution of experiment	15	
4	Calculation / Evaluation of Result	10	
5	Post Lab questions	5	
Total		50	

**Staff Signature** 

# 18EES101J-BASIC ELECTRICAL AND ELECTRONICS ENGINEERING (LABORATORY)

# PRE LAB QUESTIONS

1. What are intrinsic and extrinsic semiconductors?
2. Give examples for Trivalent and Pentavalent impurity.
3. What is the need for Zener diode?
4. What is voltage regulation and mention its significance?
5. Give the different types of semiconductor devices with symbols

Experiment No. 7 a)	
Date :	CHARACTERISTICS OF PN JUNCTION DIODE

#### Aim

To study the characteristics of PN Junction diode under forward and reverse bias conditions.

#### **Apparatus Required**

#### S.No. Name Range **Qty** 1 1 R.P.S (0-30)V1 (0-30)mA 2 Ammeter $(0-500)\mu A$ 1 (0-1)V1 3 Voltmeter (0-10)V1

#### **Components Required**

S.No.	Name	Range	Qty
1	Diode	IN4001	1
2	Resistor	1kΩ	1
3	Bread Board	-	1
	Doaru		
4	connecting	_	Req
,	Wires		rioq

#### **Theory**

A PN junction diode is a two terminal semiconducting device. It conducts only in one direction (only on forward biasing).

#### **Forward Bias**

On forward biasing, initially no current flows due to barrier potential. As the applied potential exceeds the barrier potential the charge carriers gain sufficient energy to cross the potential barrier and hence enter the other region. The holes, which are majority carriers in the P-region, become minority carriers on entering the N-regions, and electrons which are the majority carriers in the N-region, become minority carriers on entering the P-region. This injection of minority carriers results in the current flow, opposite to the direction of electron movement.

#### **Reverse Bias**

On reverse biasing, the majority charge carriers are attracted towards the terminals due to the applied potential resulting in the widening of the depletion region. Since the charge carriers are pushed towards the terminals no current flows in the device due to majority charge carriers. There will be some current in the device due to the thermally generated minority carriers. The generation of such carriers is independent of the applied potential and hence the current is constant for all increasing reverse potential. This current is referred to as Reverse Saturation Current (I<sub>O</sub>) and it increases with temperature. When the applied reverse voltage is increased beyond the certain limit, it results in breakdown. During breakdown, the diode current increases tremendously.

#### **Procedure**

#### **Forward Bias**

- 1. Connect the circuit as per the diagram.
- 2. Vary the applied voltage V in steps of 0.1V.
- 3. Note down the corresponding Ammeter readings I.
- 4. Plot a graph between V & I

#### **Observations**

- 1. Find the d.c (static) resistance = V/I.
- 2. Find the a.c (dynamic) resistance  $r = \delta V / \delta I$  ( $\mathbf{r} = \Delta V / \Delta I$ ) =  $\frac{V_2 V_1}{I_2 I_1}$ .
- 3. Find the forward voltage drop [Hint: it is equal to 0.7 for Si and 0.3 for Ge]

#### **Reverse Bias**

- 1. Connect the circuit as per the diagram.
- 2. Vary the applied voltage V in steps of 1.0V.
- 3. Note down the corresponding Ammeter readings I.
- 4. Plot a graph between V & I
- 5. Find the dynamic resistance  $\mathbf{r} = \delta \mathbf{V} / \delta \mathbf{I}$ .

#### 18EES101J-BASIC ELECTRICAL AND ELECTRONICS ENGINEERING (LABORATORY)


#### Formula for Reverse Saturation Current (I<sub>0</sub>):

$$I = I_0(e^{V/\eta V_T} - 1)$$


where I is forward (or reverse) diode current,  $I_0$  is reverse saturation current, V is external voltage (+ve for forward bias & -ve for reverser bias),  $\eta$  is constant number (1 for Silicon and 2 for Germanium),  $V_T$  is the volt-equivalent of temperature ( T/11600 ) and T is temperature in Kelvin.

#### **Circuit Diagram**

#### **Forward Bias**

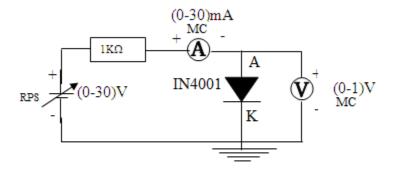

#### Reverse Bias

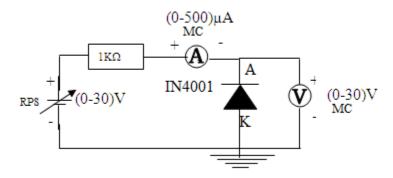

#### **Specification for 1N4001: Silicon Diode**

Peak Inverse Voltage: 50V

 $I_{dc} = 1A$ .

Maximum forward voltage drop at 1 Amp is 1.1 volts

Maximum reverse current at 50 volts is 5μA

# **Tabular Column**


# **Forward Bias**

S.No.	Voltage	Current
	(In Volts)	(In mA)


# **Reverse Bias**

S.No.	Voltage (In Volts)	Current (In µA)

# Model Graph

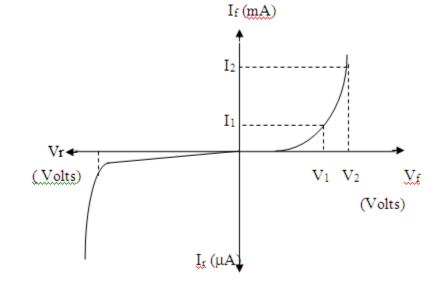

#### GRAPH:

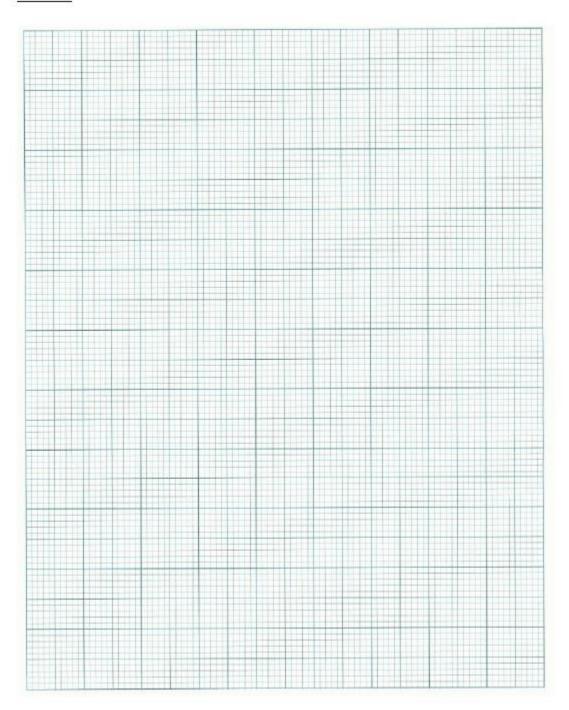

Result

Experiment No. 7 b)	CHARACTERISTICS OF ZENER DIODE
Date:	

#### Aim

To find the forward and reverse bias characteristics of a given Zener diode.

#### **Apparatus Required**

S.No.	Name	Range	Qty
1	R.P.S	(0-30)V	1s
2	Ammeter	(0-30)mA	2
3	Voltmeter	(0-10)V	1
	Volumeter	(0-1)V	1

#### **Components Required**

S.No.	Name	Range	Qty
1	Zener	FZ5.1	1
1	diode	123.1	1
2	Resistor	1ΚΩ	1
3	Bread	_	1
3	Board	_	1
4	Wires	-	Req

#### **Theory**

A properly doped crystal diode, which has a sharp breakdown voltage, is known as Zener diode.

#### **Forward Bias**

On forward biasing, initially no current flows due to barrier potential. As the applied potential increases, it exceeds the barrier potential at one value and the charge carriers gain sufficient energy to cross the potential barrier and enter the other region. The holes, which are majority carriers in p-region, become minority carriers on entering the N-regions and electrons, which are the majority carriers in the N-regions become minority carriers on entering the P-region. This injection of minority carriers results current, opposite to the direction of electron movement.

#### **Reverse Bias**

When the reverse bias is applied, due to majority carriers small amount of current (i.e.,) reverse saturation current flows across the junction. As the reverse bias is increased to breakdown voltage, sudden rise in current takes place due to Zener effect.

#### **Zener Effect**

Normally, PN junction of Zener Diode is heavily doped. Due to heavy doping the depletion layer will be narrow. When the reverse bias is increased the potential across the depletion layer is more. This exerts a force on the electrons in the outermost shell. Because of this force the electrons are pulled away from the parent nuclei and become free electrons. This ionization, which occurs due to electrostatic force of attraction, is known as **Zener effect**. It results in large number of free carriers, which in turn increases the reverse saturation current.

#### Procedure

#### **Forward Bias**


- 1. Connect the circuit as per the circuit diagram.
- 2. Vary the power supply in such a way that the readings are taken in steps of 0.1V in the voltmeter till the needle of power supply shows 30V.
- 3. Note down the corresponding ammeter readings.
- 4. Plot the graph between V & I.
- 5. Find the dynamic resistance  $\mathbf{r} = \delta \mathbf{V} / \delta \mathbf{I}$ .

#### **Reverse Bias**


- 1. Connect the circuit as per the diagram.
- 2. Vary the power supply in such a way that the readings are taken in steps of 0.1V in the voltmeter till the needle of power supply shows 30V.
- 3. Note down the corresponding Ammeter readings I.
- 4. Plot a graph between V & I
- 5. Find the dynamic resistance  $\mathbf{r} = \delta \mathbf{V} / \delta \mathbf{I}$ .
- 6. Find the reverse voltage Vr at  $I_z=20$  mA.

# **Circuit Diagram**


# **Forward Bias**

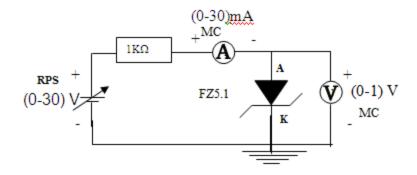

# Reverse Bias

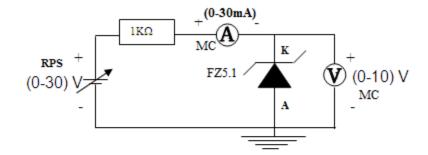

# Zener Diode

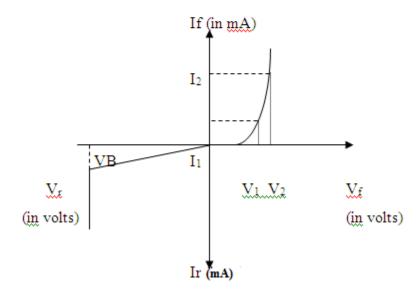

# 18EES101J-BASIC ELECTRICAL AND ELECTRONICS ENGINEERING (LABORATORY)

# **Tabular Column**


# **Forward Bias**

# S.No. Voltage (In Volts) (In mA)

# **Reverse Bias**

S.No.	Voltage (In Volts)	Current (In mA)

#### GRAPH:

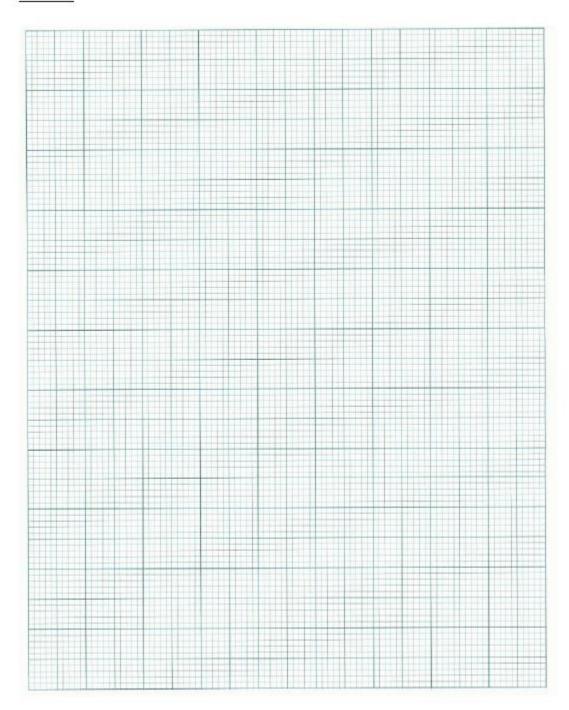

#### Result